



# 90°

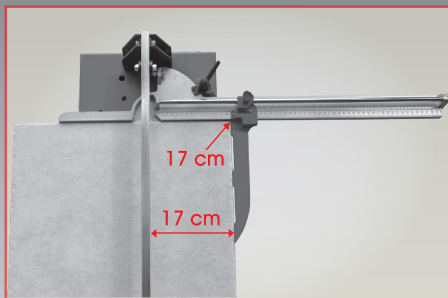


**90° ADJUSTMENT:** Adjust the ruler to 0° position by means of turning around its axis and fix it. Adjust the dimension you want to cut by means of the sliding angle on the ruler and read the dimension from the bottom scala.

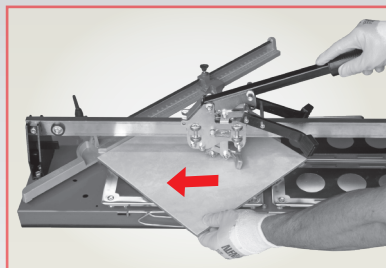

**CUTTING:** Score the cutting wheel once on ceramic tile, by means of sliding arm.


**SUITABLE FOR PORCELAIN CERAMIC**

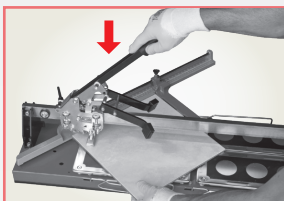

**BREAKING:** Press the sliding arm downwards slightly.



# 45°

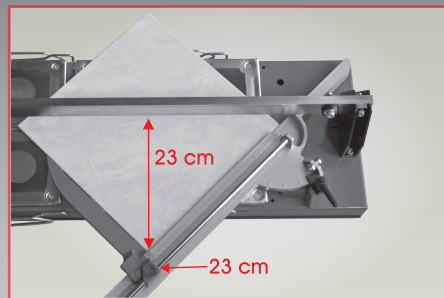

**45° ADJUSTMENT:** Adjust the ruler to 45° position by means of turning around its axis and fix it. Adjust the dimension you want to cut by means of the sliding angle on the ruler and read the dimension from the upper scala.



**Giga-Cut**

**PROFESSIONAL  
CERAMIC TILE CUTTER**

