



## Water Pump Installation Instructions.


1. Check pump package for following items.

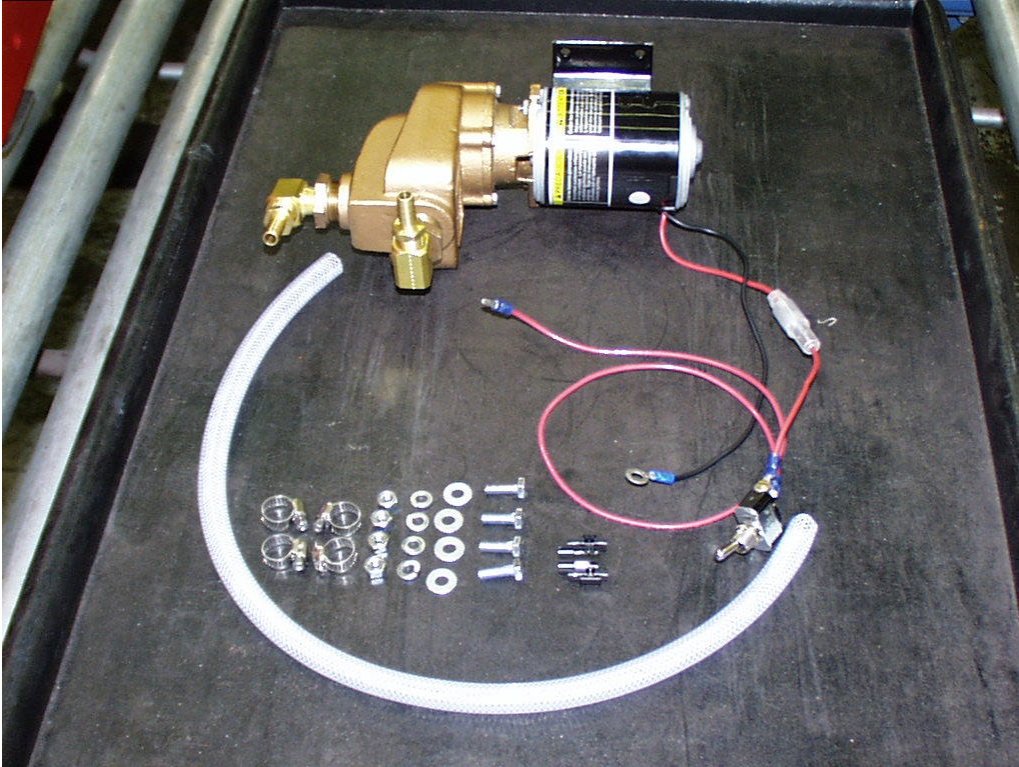


2. Remove lower rear panel of saw

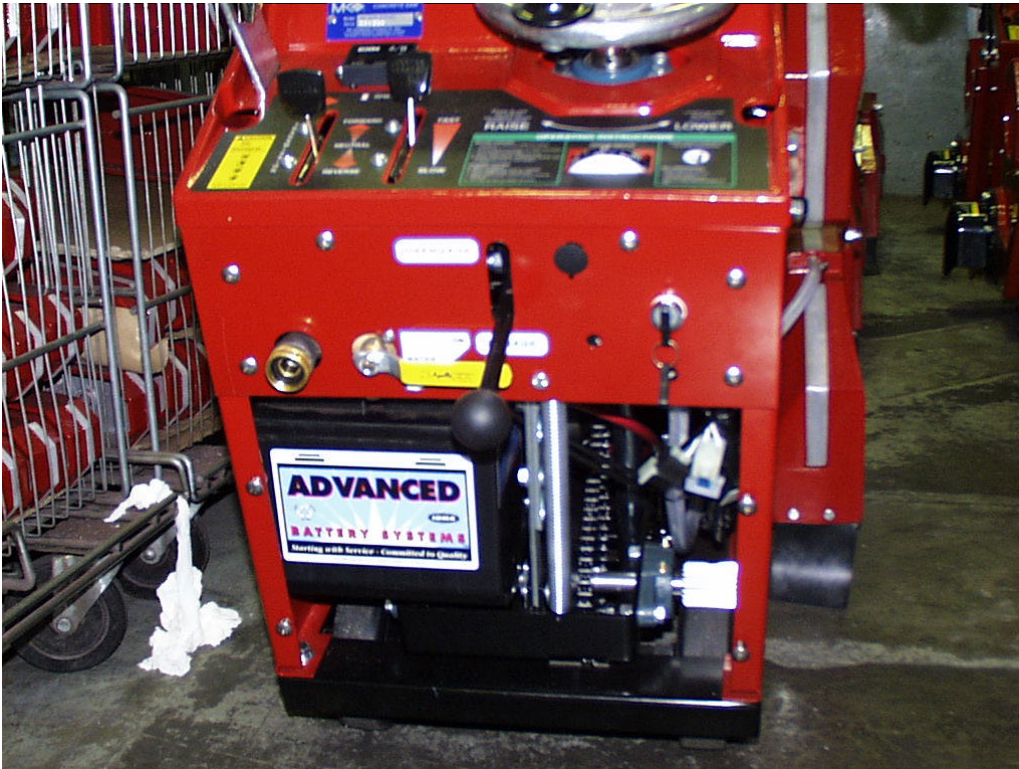


3. Remove ignition switch

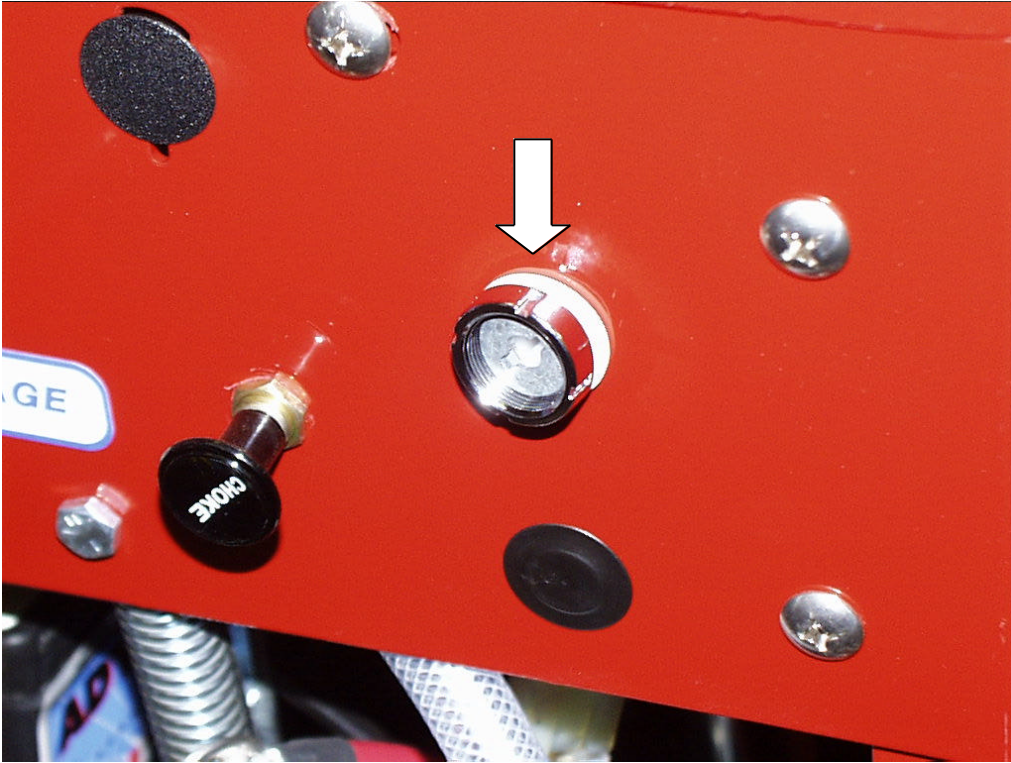


4. Pull ignition switch out and separate white wires

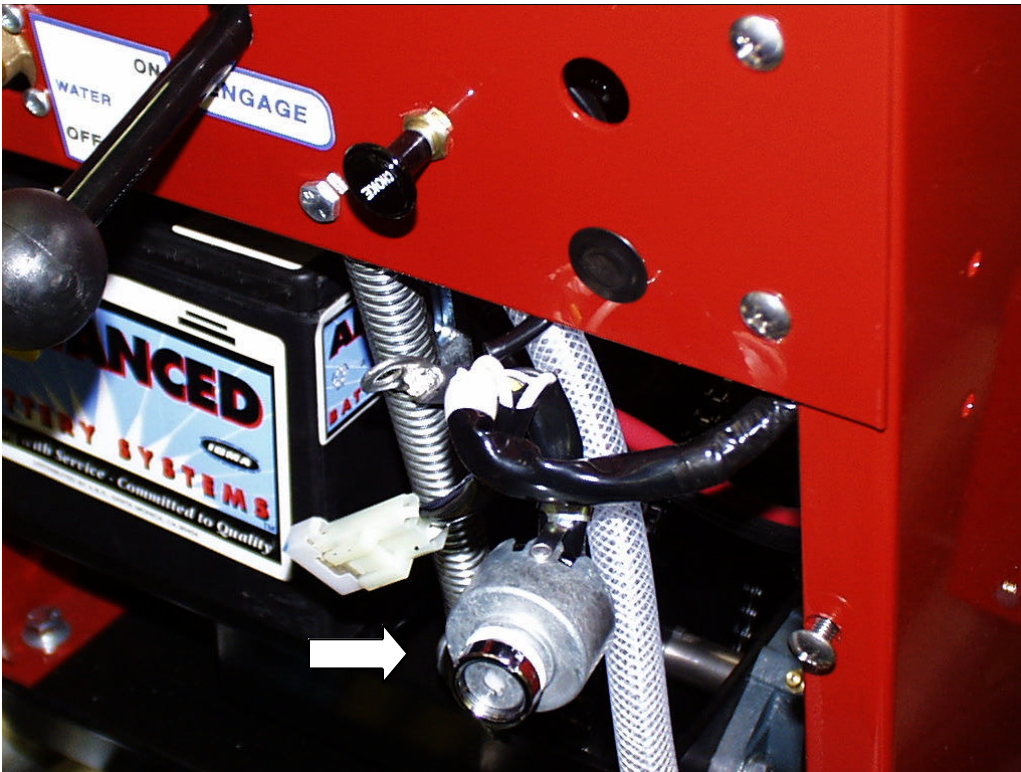



5. Connect bullet clamp-on receptacle to white wire

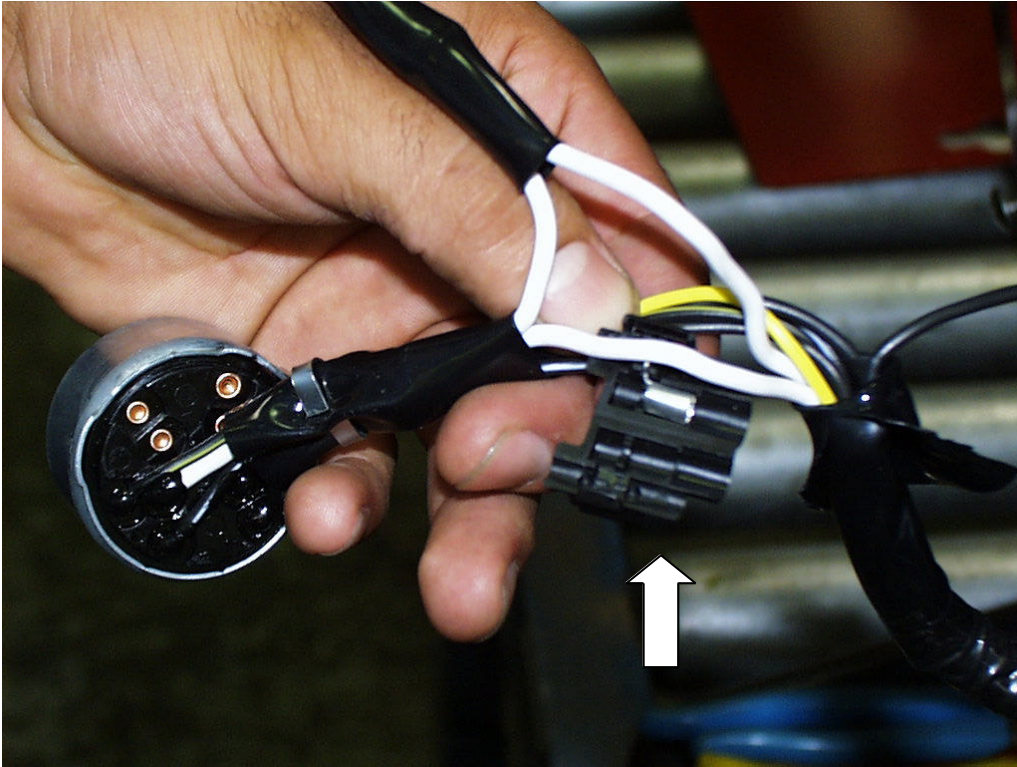


6. Detach hose from blade guard , pull out, and cut approx. 9 in from rear of saw.

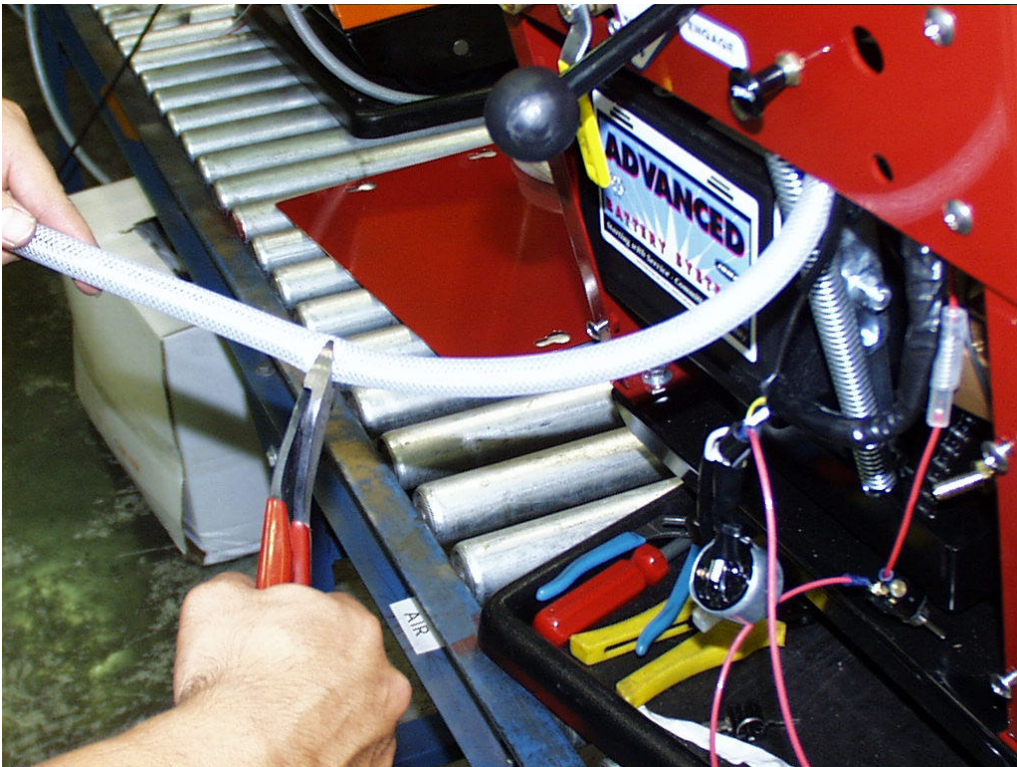


7. Attach loose part of hose to outlet fitting of water pump and install pump. Attach ground wire when installing pump to mounting screw.

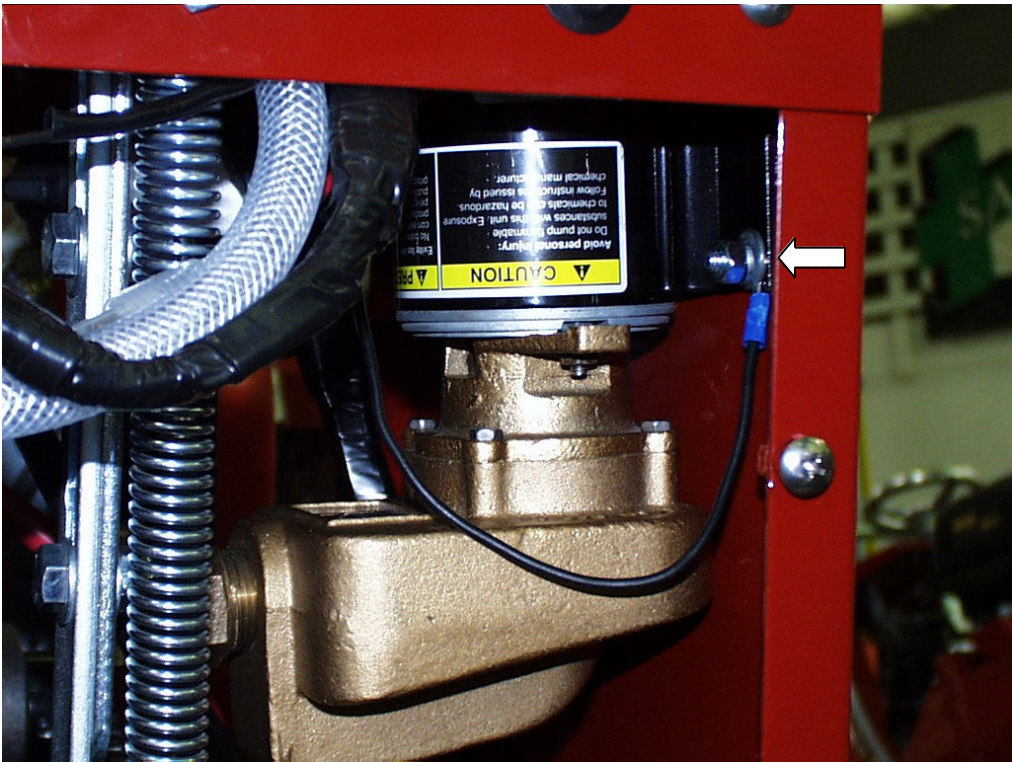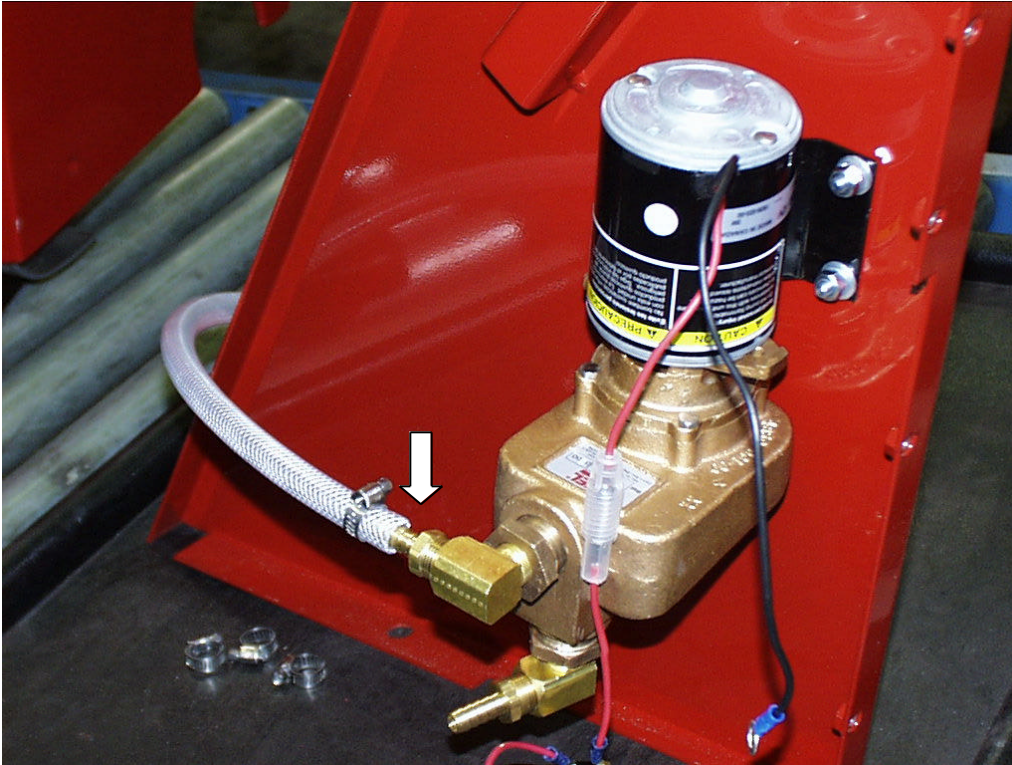


8. Attach other part of hose to inlet of water pump

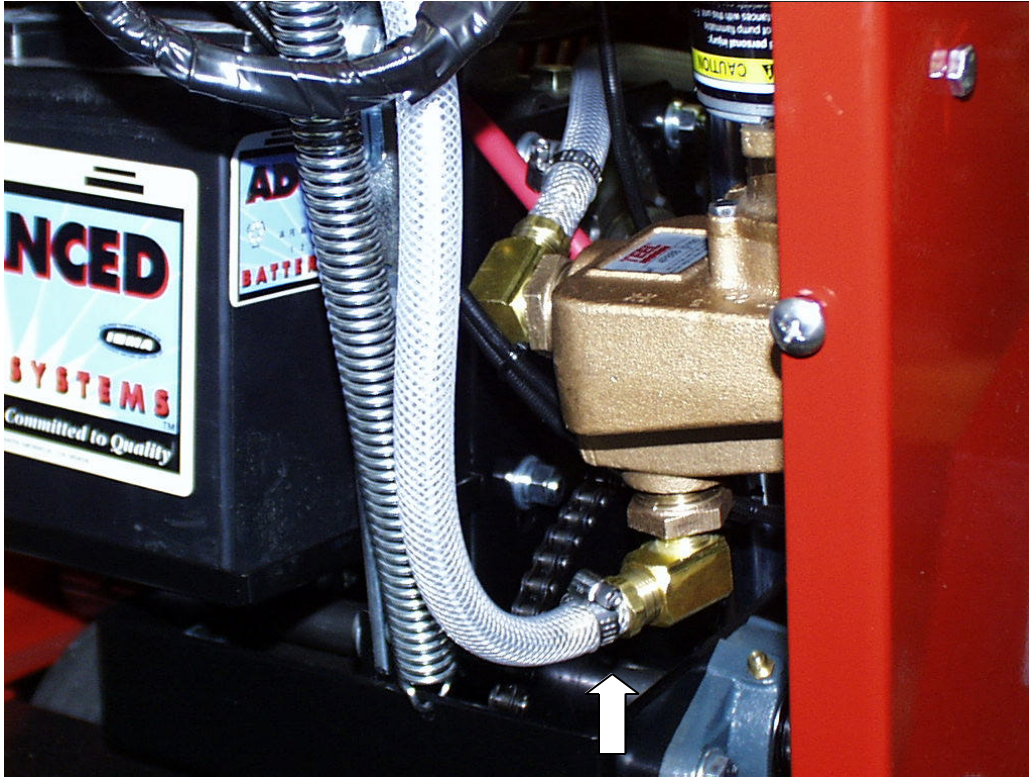

9. Insert bullet connector into bullet clamp-on receptacle

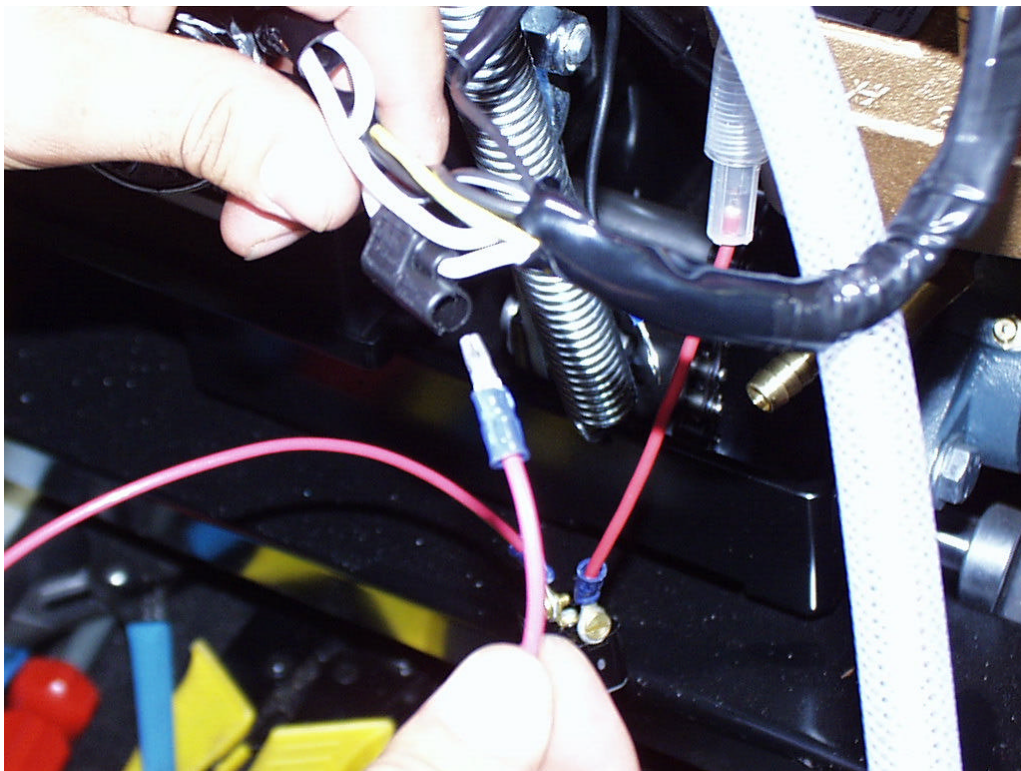

10. Re-install ignition switch, and install water pump switch. Water pump will be shipped in the off position which is point down when installed.

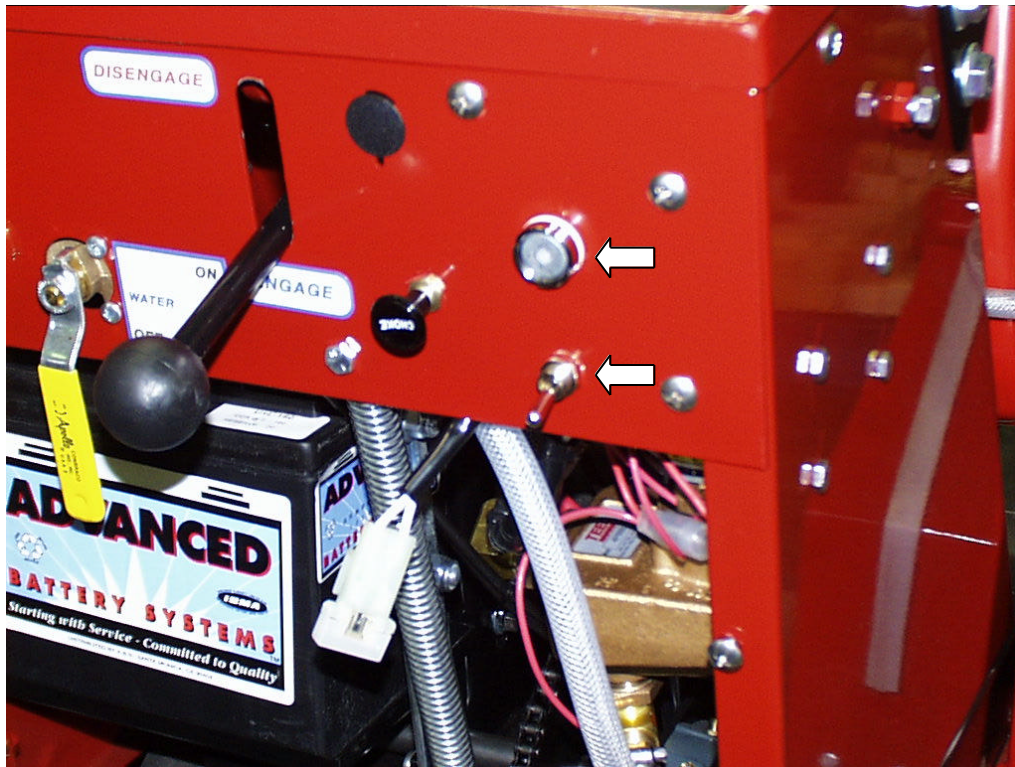

11. Re-attach water hose to blade guard.



12. Secure loose wires away from drive chain and re-install rear panel.

