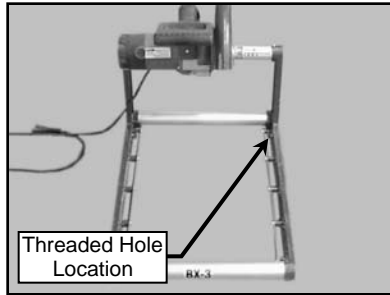



The following procedure describes how to modify older models of the BX-3 for use with the BX-3 Stand and how to place the BX-3 on the BX-3 Stand.

NOTE: Step 1 may be skipped if the BX-3 being used has the 5/16-inch Alignment Hole.

**BX-3 Modification:**


(A)

Find the Alignment Hole on the right-rear side of the BX-3

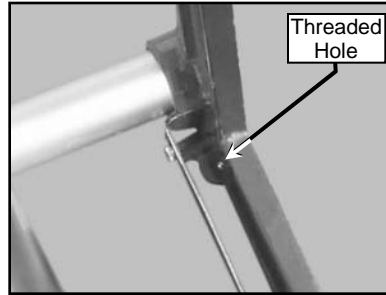


(B)

Determine if the Alignment Hole is threaded

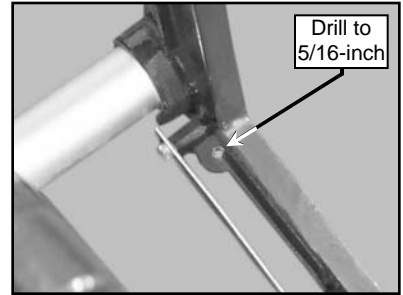


(C)

Drill out the threaded Alignment Hole using a 5/16-inch drill bit

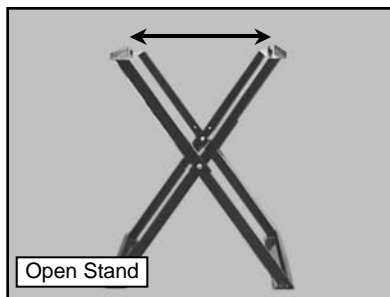**BX-3 Stand Setup:**


(A)

Open the BX-3 Stand and place it on a level surface

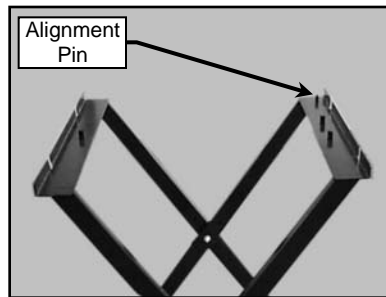


(B)

Locate the BX-3 Alignment Pin on the BX-3 Stand (Smallest of 3)

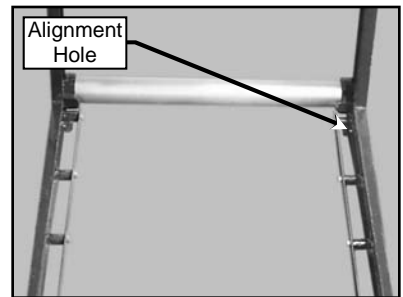


(C)

Locate the BX-3 Stand Alignment Hole (Right-rear side)

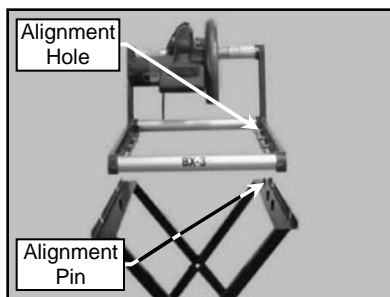

(D)

Position the BX-3 above the BX-3 Stand and orient the BX-3 Alignment Hole to the Stand Alignment Pin

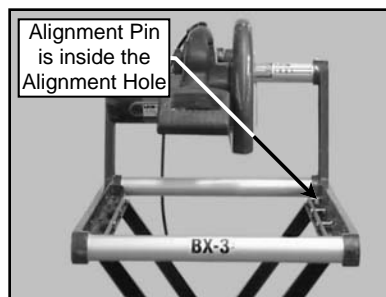

(E)

Verify the BX-3 is seated on the BX-3 Stand and the Stand Alignment Pin is inside the BX-3 Alignment Hole