

# Kirb-Perfect

patent pending

## Instructions for membrane wrapped curb

Be sure liner is installed according to all ANSI specifications and Plumbing codes.



(1) Assemble the 2 side panels with the (2) 1 1/4" screws supplied. **(Be sure not to over tighten)**



(2) Attach top panel to assembled side panels using the (8) 3/4" stainless self-tapping screws supplied. **(Be sure the arrows on top panel are pointed to inside of the shower. Do not over tighten.)**



(3) Trim inside panel to allow for pre-pitch, using snips, hacksaw or grinder.




(4) Fit assembled curb over membrane wrapped 2x4s, attach with galvanized nails (not supplied) to the exterior only. **(Caution: Do not nail to inside of curb, doing so will jeopardize the integrity of the liner!)**



(5) Pack and fill side and top panels of attached curb with mud. **(We recommend a lightweight wall mud for ease of workability.)**



(6) Let curb dry over night and use a latex modified mortar to set tile. **(Note: We recommend a roll-on waterproofing membrane to be added to the surface of the curb for additional protection prior to the installation of tile.)**

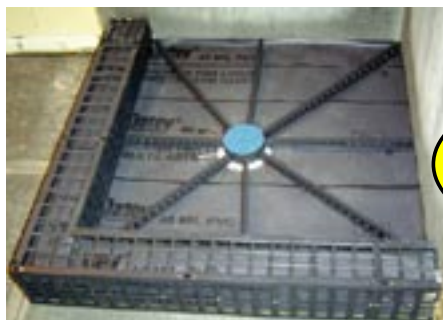

**Quick Pitch®  
with  
Kirb-Perfect®  
GOOF PROOF SHOWERS**

For more information, contact Mark E. Industries at: 28921 U.S. Hwy. 19 N., Clearwater, FL 33761  
TOLL FREE TEL.: 866-771-9470 or FAX (727) 784-2972 e-mail: ctandm@verizon.net  
www.quick-pitch.com

LIFETIME WARRANTY - Mark E Industries, Inc. warrants that Kirb-Perfect® products are free from defects in materials and workmanship. Warranty does not cover damage due to obvious misuse, abuse or modification. We will repair or replace without charge, at our option, any part that should prove defective. Part(s) must be returned, freight prepaid, with proof of purchase.

# Kirb-Perfect

patent pending

## Instructions for non-wood curb


Be sure liner is installed according to all ANSI specifications and Plumbing codes.



(1) Trim inside panel to allow for pre-pitch, using snips, hack saw or grinder.



(2) Hold liner up in center of curb and position between center posts. Screw together with the (2) 1 1/4" screws supplied. **(Be sure not to over tighten.)** Trim excess liner even with top of center post.

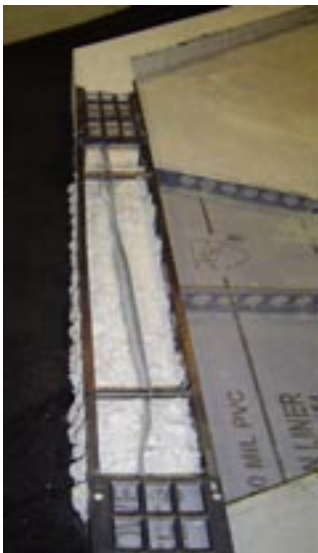

(3) Fill curb with mud just short of top. **(We recommend a light weight wall mud for ease of workability.)**



(4) Install top panel using the (8) 3/4" stainless, self tapping screws supplied. **(Be sure the arrows on top panel are pointed to inside of the shower. Do not over tighten.)**



(5) Fill balance of curb with mud and screed top and sides.



(6) Let curb dry over night and use a latex modified mortar to set tile. **(Note: We recommend a roll-on waterproofing membrane to be added to the surface of the curb for additional protection prior to the installation of tile.)**



**Quick Pitch®  
with  
Kirb-Perfect®  
GOOF PROOF SHOWERS**

For more information, contact Mark E. Industries at: 28921 U.S. Hwy. 19 N., Clearwater, FL 33761  
TOLL FREE TEL.: 866-771-9470 or FAX (727) 784-2972, e-mail: ctandm@verizon.net  
www.quick-pitch.com

LIFETIME WARRANTY - Mark E Industries, Inc. warrants that Kirb-Perfect® products are free from defects in materials and workmanship. Warranty does not cover damage due to obvious misuse, abuse or modification. We will repair or replace without charge, at our option, any part that should prove defective. Part(s) must be returned, freight prepaid, with proof of purchase.