



Tool Tips

Operation & Safety

Brick Saw Stand Setup

Safety Practices:

Always use with a GFCI protected receptacle.

Always wear eye protection when operating or working near this equipment. This tool produces considerable mist and sharp debris under normal operation.

Wear a dust mask to avoid breathing heavy dust or mist, and to protect against debris. Old brick and tile may contain asbestos, which causes cancer.

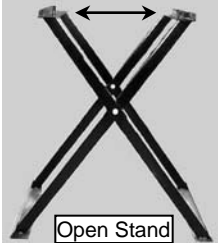
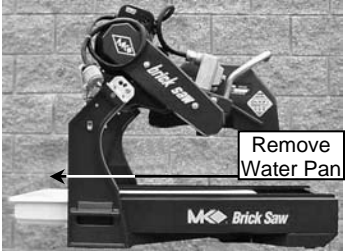
Keep the blade guard in place at all times.

Always disconnect the power cord before cleaning, replacing the blade, or servicing the tool.

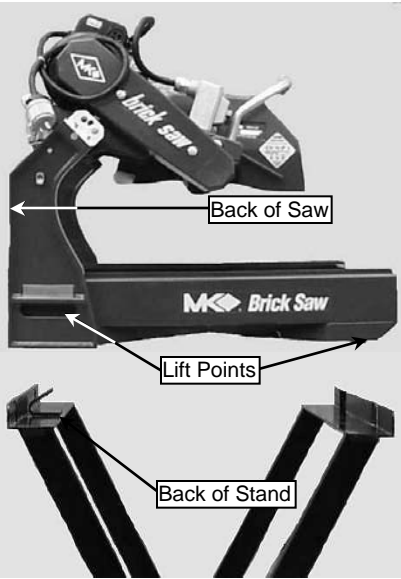
Never leave the saw running unattended. Turn the power off.

Never use the saw on an unsupported surface to avoid accidents.

Application: The Universal Stand is for use with the MK-2000 Brick Saw

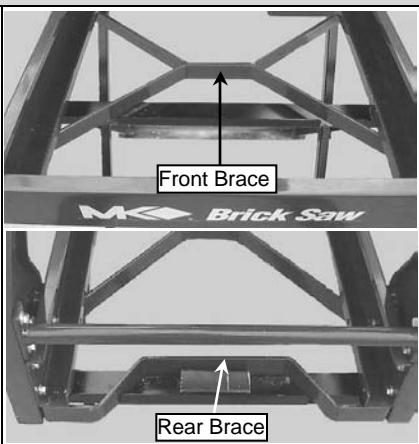

| Step | Action | |
|------|---|--|
| 1. | Stand Placement a) Open the scissor stand b) Position the scissor stand on a flat level surface |  Open Stand |
| 2. | Remove the Water Pan a) Remove the Water Pan from the back of the saw |  Remove Water Pan |

CAUTION The MK-2000, Brick Saw weighs over 190 pounds; two people are required when lifting or moving.

| | | |
|----|--|---|
| 3. | Orient Saw a) Lift the saw using the handles on either side of the frame, and the front of the frame b) Locate the back of the stand c) Orient the back of the saw toward the back of the stand |  |
|----|--|---|



Brick Saw Stand Setup

| Step | Action | |
|------|---|--|
| 4. | <p>Seat Saw</p> <p>a) Align and seat the saw front brace on the front of the stand</p> <p>b) Align and seat the saw rear brace on the rear of the stand</p> |  |
| 6. | <p>Reinstall Water Pan</p> <p>a) Slide the Water Pan into the saw from the back</p> |  |